


Installation Instructions for FM9

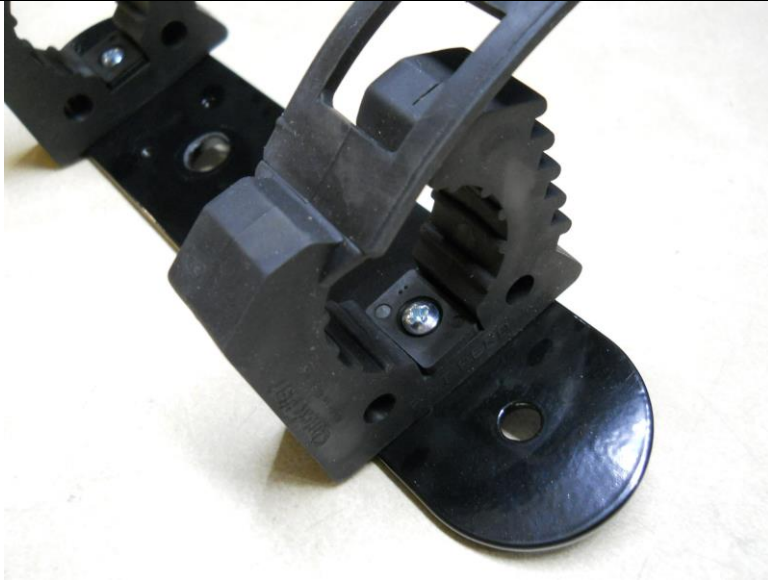

Insert small screws into the countersunk hole in the black plastic square washers.

Insert that into the Quick Fists.

Place Quick Fists into the mount in the center located holes as shown.



Secure with the small washers and nuts.

Note: A thread lock compound such as Loctite is a fantastic idea here.



Place the supplied large bolt into the mount, then place 3 washers and the large nut onto the back side as shown. The nut does not thread onto the bolt, it is just being used as a spacer.



Remove the rear seat belt and secure the mount to the D pillar.

If you are missing anything please email RefinedCycle@gmail.com.